

UNBOX PRINTER



Remove white handles.
Do not cut box tape.



Lift upper box lid from
lower box.



Remove outer packaging.



Lift printer with 2 people and
set on sturdy table.

REMOVE INTERIOR PACKAGING



Remove blue packaging tape.



Pull out left/right orange sled
caps and blue tape.



Pull out orange ink cap
and blue tape.



Remove screen cover.



Save packaging materials with
the original printer box in case
printer is shipped at a later date.

READY PRINTER



Install ink by pushing in until
cartridge clicks into place.



Plug in power and network
cables. Turn on power switch.



In about 2 minutes *Printer Ready*
displays in lower left display corner.



Watch the Setup Video

NeuraLabel
Printing Solutions

www.neuralabel.com
support@neuralabel.com



Printer Setup



In The Box

- Ink Set
- Power Cable
- Network Cable
- Printer
- Packaging Materials